

SERVICE MANUAL

DAIHATSU

G202

FOREWORD

This service manual describes the maintenance and servicing procedures for Model G202.

In this service manual, the entire portion is divided into 19 sections. Each section has an index along with a table of contents at the beginning.

All information used in this service manual was in effect at the time when the manual was approved for printing. However, the specifications and procedures may be revised due to continuing improvements in the design without incurring any obligation to us.

Published in October, 1993

DAIHATSU MOTOR CO., LTD.

© 1993 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.

NO. 9188-GE

DAIHATSU G202

Service manual

SECTION INDEX

NAME	SECTION
GENERAL INFORMATION	GI
MAINTENANCE	MA
ENGINE MECHANICAL	EM
EMISSION CONTROL	EC
FUEL SYSTEM	FU
LUBRICATION SYSTEM	LU
COOLING SYSTEM	CO
IGNITION SYSTEM	IG
STARTING SYSTEM	ST
CHARGING SYSTEM	CH
CLUTCH	CL
MANUAL TRANSMISSION	MT
FRONT AXLE & SUSPENSION	FS
REAR AXLE & SUSPENSION	RS
BRAKE	BR
STEERING	SR
BODY	BO
BODY ELECTRICAL	BE
HARNESS & WIRING DIAGRAM	HW